
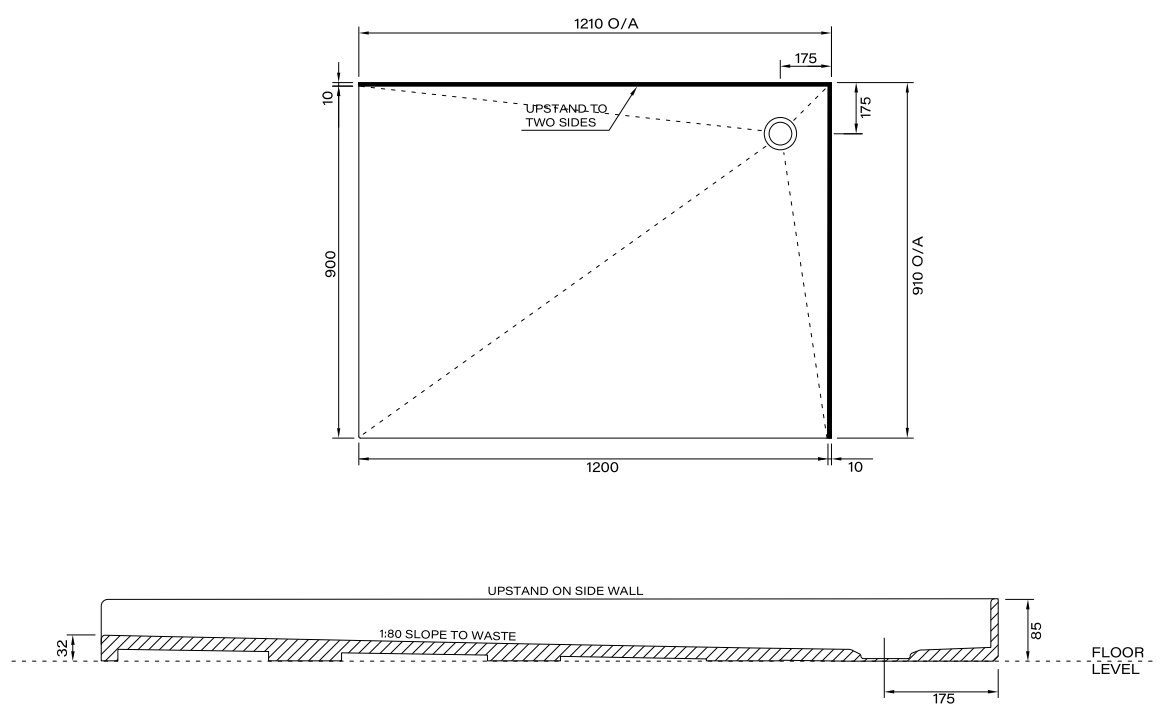



REAR DRAIN



Note: Verify exact shower base dimensions on site

SCREEN OPTIONS:		TRAY FINISHES:		For more product information including CAD details, go to: 🌐 https://atlantis.co.nz/showers/verve For installation instructions go to: 🌐 https://atlantis.co.nz/technical-downloads
Hinged Door VER118 	Sliding Door VER128 	 SILK (MATTE WHITE)	 ASH (MATTE GREY)	