


CENTRE REAR DRAIN

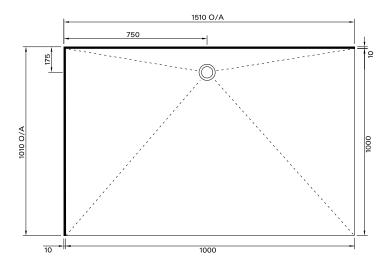



Note: Verify exact shower base dimensions on site

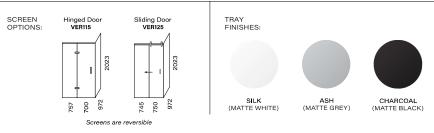

For more product information including CAD details, go to:

https://atlantis.co.nz/showers/verve

For installation instructions go to:

https://atlantis.co.nz/technical-downloads