


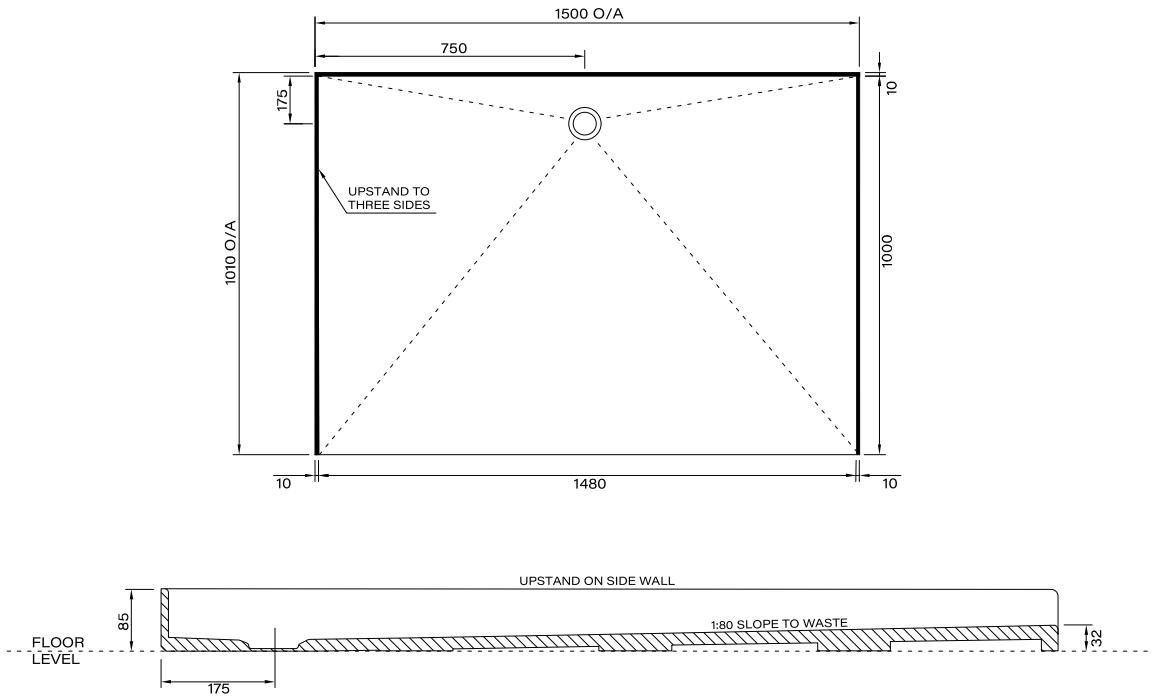


CENTRE REAR DRAIN



Note: Verify exact shower base dimensions on site

SCREEN
OPTIONS:

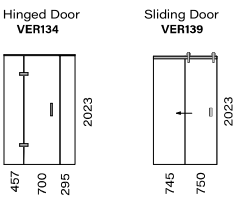

TRAY
FINISHES:



For more product information including CAD details, go to:
<https://atlantis.co.nz/showers/verve>

For installation instructions go to:
<https://atlantis.co.nz/technical-downloads>